

Table of Contents

<u>Understanding Dial Peers and Call Legs on Cisco IOS Platforms</u>	1
<u>Document ID: 12164</u>	1
<u>Introduction</u>	1
<u>Prerequisites</u>	1
<u>Requirements</u>	1
<u>Components Used</u>	1
<u>Conventions</u>	1
<u>Types of Dial-Peers</u>	1
<u>Relationship Between Dial Peers and Call Legs</u>	2
<u>Call Setup Process</u>	3
<u>Related Information</u>	4

Understanding Dial Peers and Call Legs on Cisco IOS Platforms

Document ID: 12164

Introduction

Prerequisites

Requirements

Components Used

Conventions

Types of Dial–Peers

Relationship Between Dial Peers and Call Legs

Call Setup Process

Related Information

Introduction

The purpose of this document is to introduce the topic of voice dial peers and call legs. It explains the call setup process through a packet network using Cisco IOS® software voice–enabled gateways/routers.

For other topics discussing dial peers, refer to the Related Information section of this document.

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

This document is not restricted to specific software and hardware versions.

Conventions

For more information on document conventions, see the Cisco Technical Tips Conventions.

Types of Dial–Peers

Cisco IOS uses two types of dial–peers which are defined as:

- Plain old telephone systems (POTS) dial peer These define the characteristics of a traditional telephony network connection. The POTS dial peer maps a dial string to a specific voice port on the local router/gateway. Normally the voice port connects the router/gateway to the local Public Switched Telephone Network (PSTN), private automatic branch exchange (PBX), or telephone.
- Voice–Network dial peers These define the attributes of a packet voice network connection. Voice–Network dial peers map a dial string to a remote network device. Some examples of these remote network devices are listed below:

- ◆ Destination router/gateway
- ◆ Cisco CallManager
- ◆ Session Initiation Protocol (SIP) server (for Voice over IP SIP)
- ◆ Open Settlements Protocol (OSP) server (for Voice over IP using settlement)
- ◆ H.323 Gatekeeper
- ◆ Mail Transfer Agent (MTA) Server (for Multimedia Mail over IP scenarios)

The specific type of Voice–Network dial peer depends on the packet network technology used. Different technologies used by dial peers are explained below:

- ◆ Voice over IP (VoIP) – The dial peer is mapped to the IP address, Domain Name System (DNS) name, or server–type of the destination VoIP device that terminates the call. This applies to all VoIP protocols such as H.323, SIP, and Media Gateway Control Protocol (MGCP).
- ◆ Voice over Frame Relay (VoFR) – The dial peer is mapped to the data–link connection identifier (DLCI) of the interface from which the call exits the router.
- ◆ Voice over ATM (VoATM) – The dial peer is mapped to the ATM virtual circuit for the interface from which the call exits the router.
- ◆ Multimedia Mail over IP (MMoIP) – The dial peer is mapped to the e–mail address of the Simple Mail Transfer Protocol (SMTP) server. This type of dial peer is used for Store and Forward Fax (on–ramp and off–ramp faxing).

The Cisco IOS command to enter into the dial peer configuration mode is:


```
maui-nas-07(config)#dial-peer voice number ?

pots    Telephony
voatm   Voice over ATM
vofr    Voice over Frame Relay
voip    Voice over IP
```

Relationship Between Dial Peers and Call Legs


A voice call over a packet network is segmented into discrete call legs that are associated with dial–peers (a dial–peer is associated with each call leg). A call leg is a logical connection between two router/gateways or between a router/gateway and an IP telephony device (for example Cisco CallManager, SIP Server, so forth and so on). To illustrate this concept, refer to Figure 1 and 2 below:

Figure 1. Voice Dial Peers / Call Legs Toll–bypass Scenario

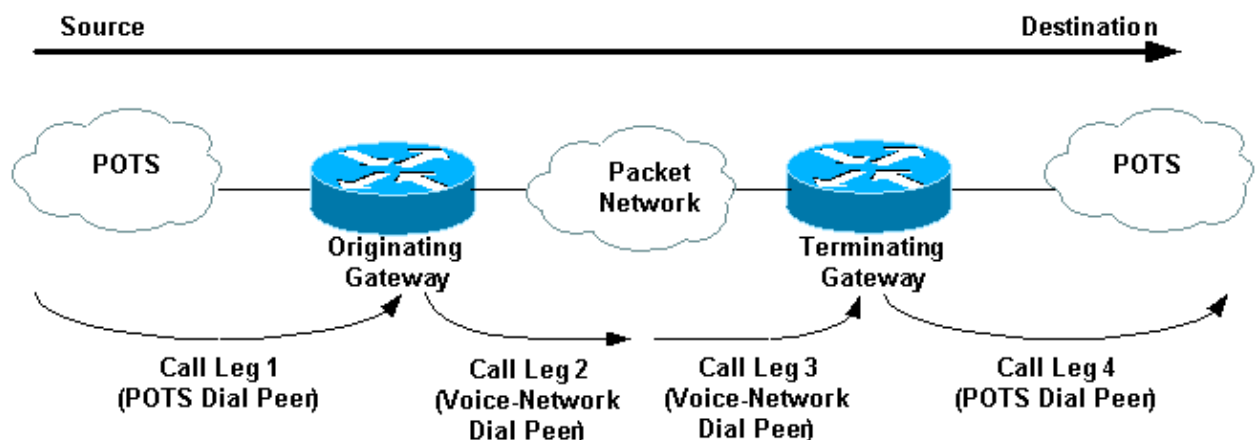

In Figure 1 (toll-bypass), a voice call comprises four call legs, two from the perspective of the *originating* router/gateway and two from the perspective of the *terminating* router/gateway.

Figure 2. Voice Dial Peers / Call Legs: Call Manager System with IOS Gateway Scenario

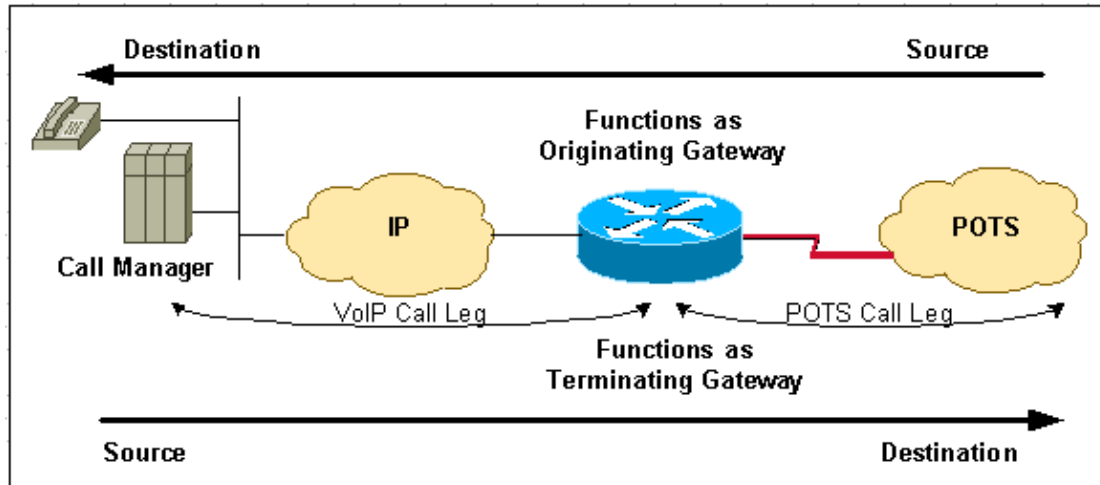

In the Figure 2 (Call Manager system with IOS Gateway), a voice call comprises two call legs.

Note: The terms originating router/gateway and terminating router/gateway are dependent on the source to destination direction of the call.

Note: Hair-Pinning is the name given to calls that originate and terminate on the same router/gateway. On POTS-to-POTS Hair-Pinning calls, the router/gateway matches an inbound POTS dial-peer and an outbound POTS dial-peer to terminate the call. Although, this is supported on POTS interfaces, VoIP-to-VoIP Hair-Pinning is not supported on Cisco IOS voice-enabled platforms.

Call Setup Process

In summary, a call is segmented into call legs with a dial peer associated to each call leg. The process for this is listed below:

1. The POTS call arrives to the originating router/gateway and an *inbound* POTS dial-peer is matched. (See Note 3 below).
2. After associating the incoming call to an *inbound* POTS dial-peer, the originating router/gateway creates an *inbound* POTS call leg and assigns it a Call ID (Call Leg 1 in Figure 1).
3. The originating router/gateway uses the dialed string to match an *outbound* Voice-Network dial-peer.
4. After associating the dialed string to an outbound Voice-Network dial-peer, the originating router/gateway creates an outbound Voice-Network call leg and assigns it a Call ID (Call Leg 2 in Figure 1).
5. The Voice-Network call requests arrives at the terminating router/gateway and an *inbound* Voice-Network dial-peer is matched.
6. After the terminating router/gateway associates the incoming call to an inbound Voice-Network dial peer, the terminating router/gateway creates the *inbound* Voice-Network call leg and assigns it a Call ID. (Call Leg 3 in in Figure 1) (See **Note 4** and **Note 5** below)
7. The terminating router/gateway uses the dialed string to match an *outbound* POTS dial-peer.
8. After associating the incoming call setup to an *outbound* POTS dial peer, the terminating gateway/router creates an *outbound* POTS call leg, assigns it a Call ID, and terminates the call. (Call

Leg 4 in in Figure 1)

In scenarios where a Cisco CallManager is present with a Cisco IOS router/gateway assume the following:

- For *outbound* calls from the CallManager system through an IOS router/gateway, the IOS router/gateway behaves as a terminating device.(Look at steps 5–8.)
- For *inbound* calls to the CallManager system through an IOS router/gateway, the IOS router/gateway behaves as an originating device. (Look at steps 1–4.)

Note: At this stage, if configured on the *inbound* POTS dial-peer, non-default inbound POTS services and/or Tool Command Language (TCL) applications are used. When using such services or applications, it is important to be certain that the correct *inbound* POTS dial-peer is matched. Some examples of services / applications include:

- DID (direct-inward-dial)
- TCL Based Applications: such as IVR (Interactive Voice Response), VoIP SIP Transfer, On-Ramp Faxing (in the context of Store and Forward Fax).

For more information refer to: Voice – Understanding How Inbound and Outbound Dial Peers are Matched on Cisco IOS Platforms

Note: At this point, both routers/gateways negotiate Voice–Network capabilities and applications (if required). Default capabilities are not displayed on the router/gateway IOS configuration output. Use the command **show dial-peer voice number** to view the configured capabilities, services and applications on POTS and Voice–Network dial-peers.

- Default capabilities include: **codec** g729r8, vad enable , dtmf-relay disable , **fax-relay** disable , **req-qos** best-effort, **acc-qos** best-effort, **session protocol** cisco (for h.323).
- Examples of TCL applications include: Remote IP Authentication and Off-Ramp Faxing.

Note: When non-default capabilities or applications are requested by the originating router/gateway, the terminating router/gateways needs to match an *inbound* Voice–Network dial-peer that is configured for such capabilities or applications.

Related Information

- [Understanding Inbound and Outbound Dial Peers on Cisco IOS Platforms](#)
- [Understanding How Inbound and Outbound Dial Peers are Matched on Cisco IOS Platforms](#)
- [Understanding the Operational Status of Dial-Peers on Cisco IOS Platforms](#)
- [Understanding Direct-Inward-Dial \(DID\) on Cisco IOS Digital \(T1/E1\) Interfaces](#)
- [Configuring Dial Plans, Dial Peers, and Digit Manipulation](#)
- [Voice, Telephony and Messaging TAC eLearning Solutions](#)
- [Technical Support – Cisco Systems](#)

All contents are Copyright © 1992–2004 Cisco Systems, Inc. All rights reserved. Important Notices and Privacy Statement.

Updated: Aug 31, 2004

Document ID: 12164
